


Cover gasket


Montage

First instalment


- Make sure that the cover gasket is:
- ◆ Not damaged.
 - ◆ Placed correctly, the high side of the gasket must be on the inside.
 - ◆ Make sure that the gasket contact areas are clean.

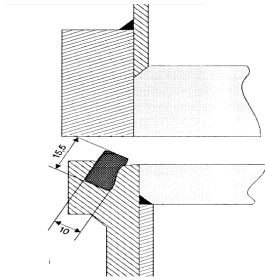


Seal before closing

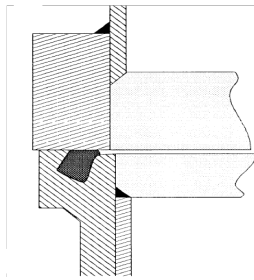

Seal after closing

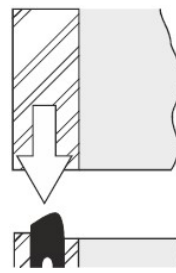


Correct placement

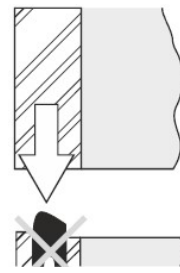

Incorrect placement of gasket

Installing cover gasket


1. Open the filter (check filter cover datasheet)
2. Remove the old gasket without damaging the filter .
3. Make sure that the gasket groove and contact areas are clean.
4. Press the gasket cover into the groove at 0°, do this also on the opposite side 180° and further at 90° and 270° of the gasket groove periphery to make sure that the gasket will not be elongated during mounting.

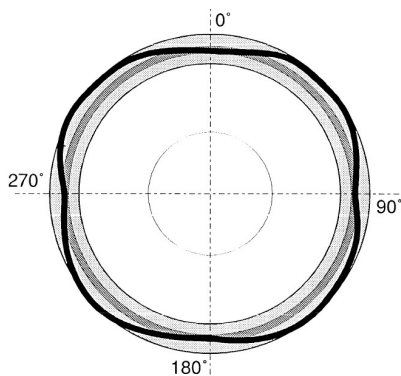

5. Proceed with pressing the remaining parts into the gasket groove.
6. Make sure that the gasket is installed correctly.

NON fitting gaskets need the following steps:

1. Cut the gasket ends at an angle of 45° to horizontal.

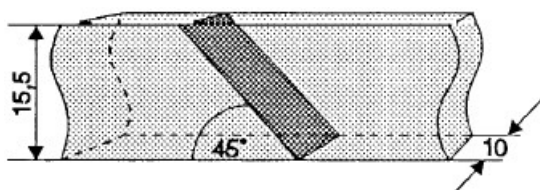

2. Stick the gasket ends together with suitable glue. (e.g. Sicomet one component Cyanoacrylate adhesive of Henkel Ltd.)

